

UIP software (version 5 or higher)
and
USB Cable Driver

are downloadable at
<https://senseair.com/product/evaluation-kit-sadk/>



NOTE:
ESD-sensitive product.
Use ESD protection equipment.



Senseair
Local
representative

Senseair AB (headquarter)


Stationsgatan 12, Box 96, 824 08 Delsbo, Sweden
Phone: +46-653 - 71 77 70
senseair.com

IMA0298
Rev 7




Installation manual SADK S8 and S88

Senseair Development Kit S8 and S88

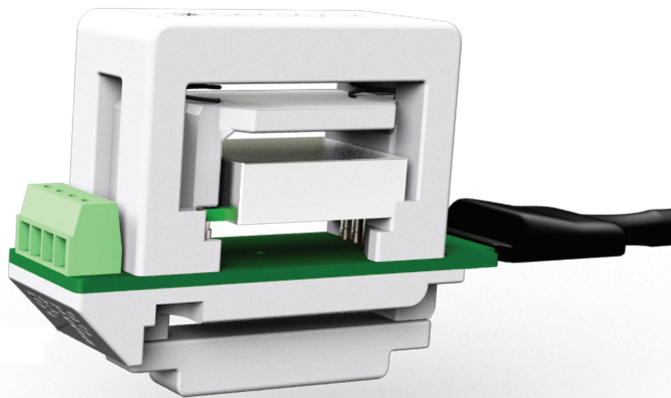

1

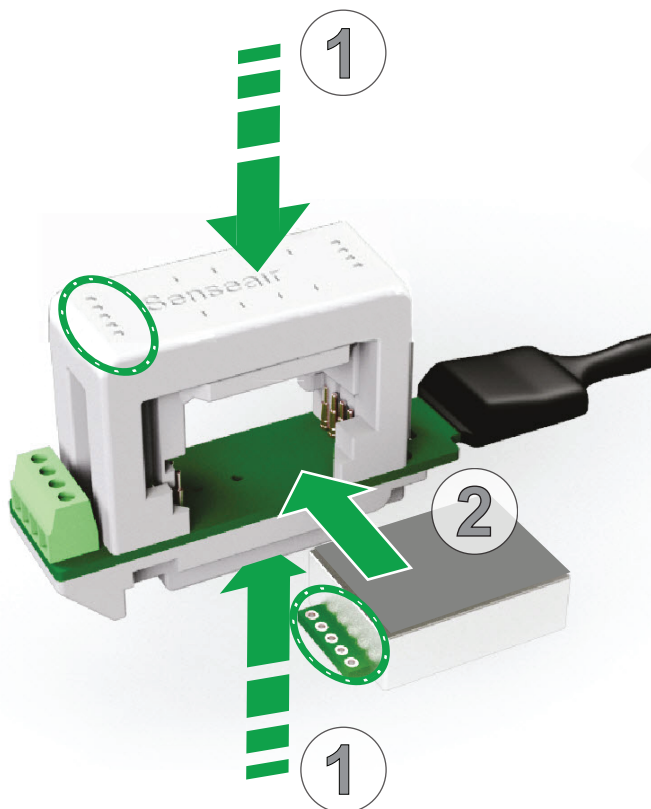

2

