


UIP software (version 5 or higher)
and
USB Cable Driver

are downloadable at
<https://senseair.com/download>

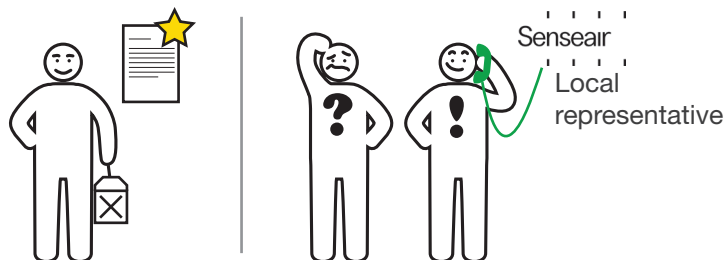

Senseair AB (headquarter)

Stationsgatan 12, Box 96, 824 71 Delsbo, Sweden
Phone: +46-653 – 71 77 70
senseair.com


IMA0299
Rev 4




Senseair

Installation manual
SADK S8-4B

Senseair Development Kit S8

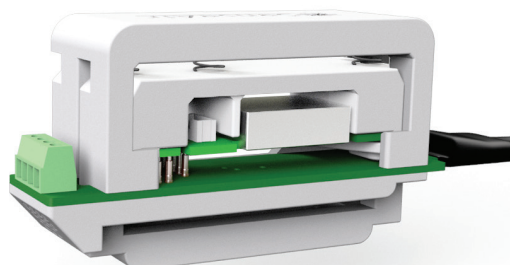

1

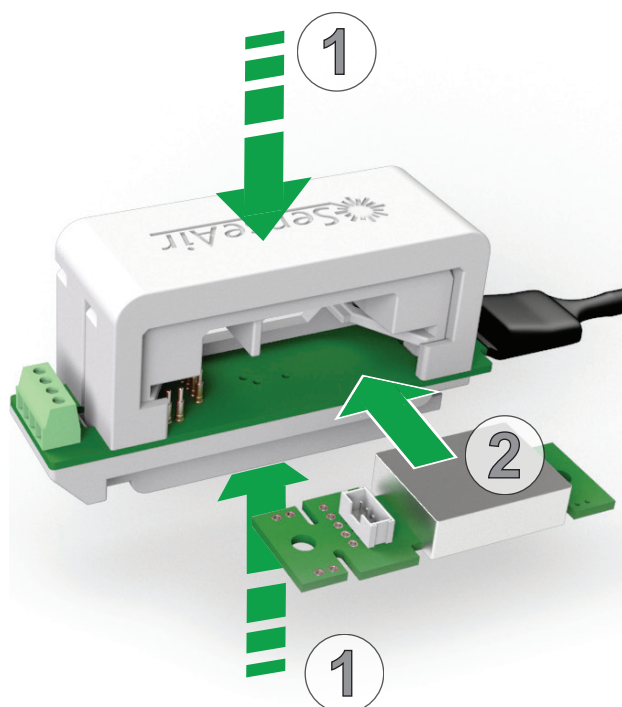

2

