
 
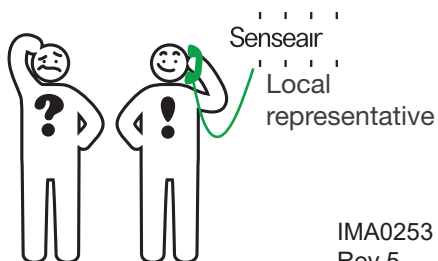



Installation manual SADK Interface

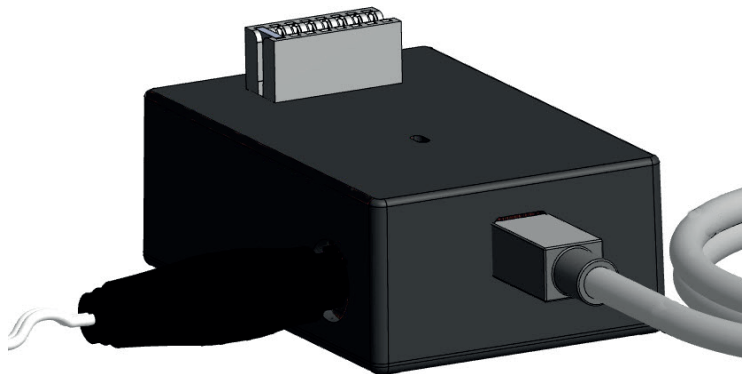


IMA0253
Rev 5

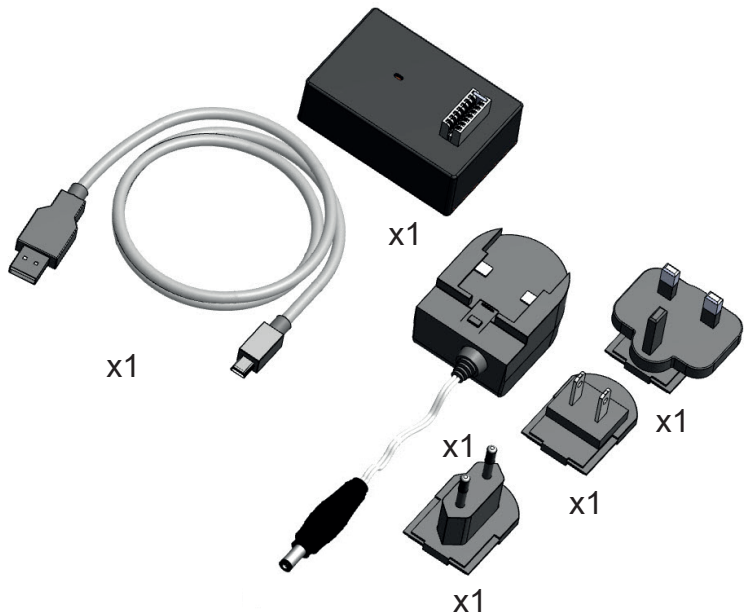


Senseair

1


- 1 Download UIP software and USB Cable Driver at <https://senseair.com/product/evaluation-kit-sadk/>
- 2 Run the UIP software
- 3 Check for updates

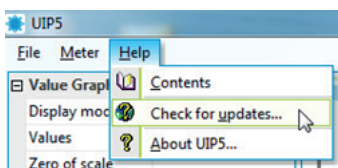


Run this option

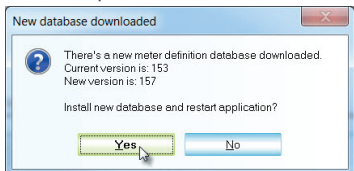



Until...

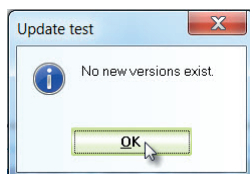

2

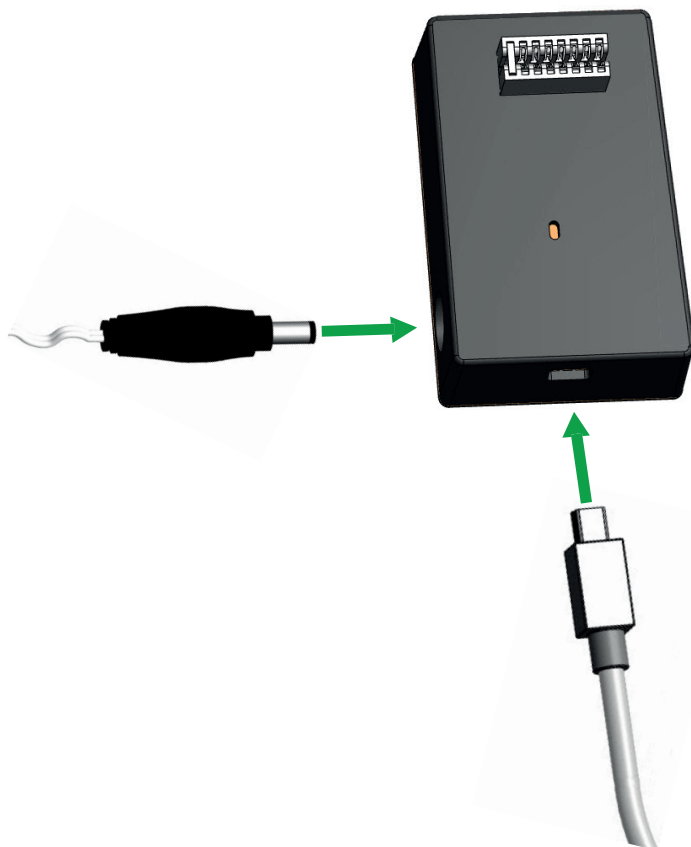


3

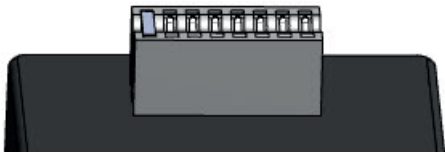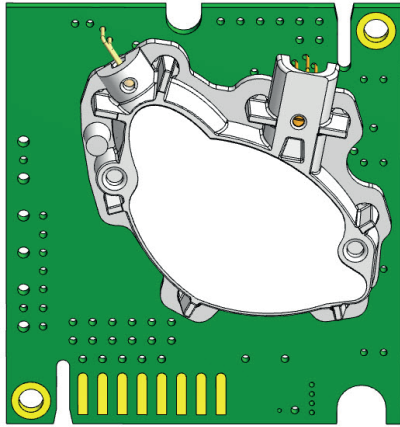


NOTE:
ESD-sensitive product.
Use ESD protection equipment.

4

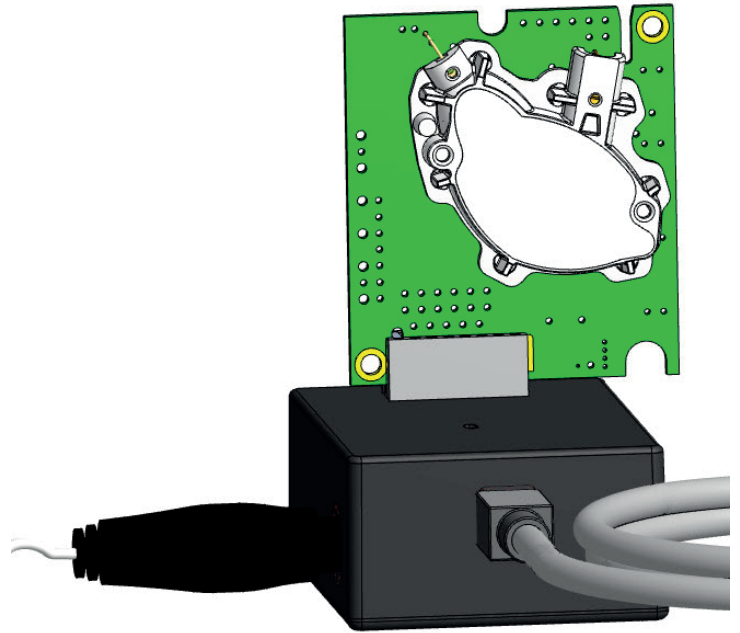


5

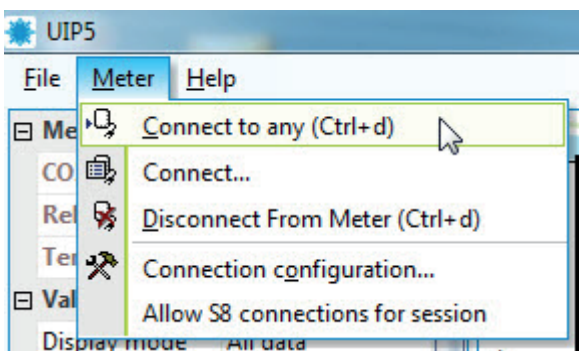

6

For more information see Help in the UIP5 program!

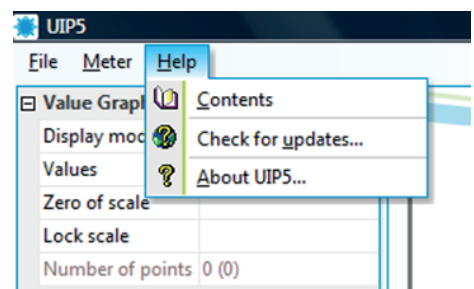

Senseair AB (headquarter)
Stationsgatan 12, Box 96, 824 71 Delsbo, Sweden
Phone: +46 653 71 77 70
senseair.com