


# Product Specification

## tSENSE (Disp)


CO<sub>2</sub>, Temperature and RH sensor in a housing  
with colour touch display

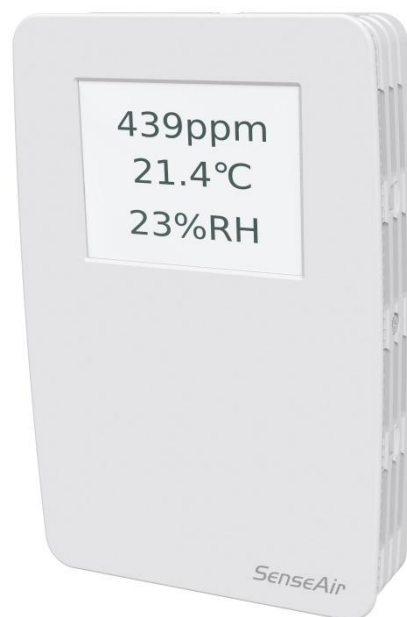

### General

tSENSE (Disp) is an advanced and versatile 3-in-1 sensor in a housing, designed for installation in the air-conditioned zone. It measures CO<sub>2</sub> concentration, temperature and humidity in the ambient air accurately without need for additional compensation — true read. The data transmits to a BMS system or stand-alone controller using industry standard output signals and communication protocols.

Complies with ASHRAE standard 189.1 ( $\pm 50$ ppm @ 1000ppm of measured CO<sub>2</sub> value)

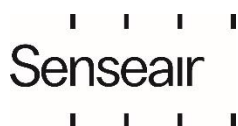

## Key technical specification

Item	tSENSE (Disp)
------	---------------

### General performance

Operating environment	Residential, and commercial spaces
CO <sub>2</sub> measurement range	0 – 2000 ppm <sub>vol.</sub>
Temperature measurement range	0 – 50 °C
Relative humidity measurement range	0 – 100% RH
Storage environment	Non-condensing, non-corrosive environment
Storage temperature range	-30 – 70 °C
Communication	Modbus (MB) or BACnet (BAC) protocol over RS485
Linear analogue outputs	Voltage 0 – 10 V.
Digital output	Relay
Warm-up time	≤1 min. (@ full specs 15 min)
Life expectancy	>15 years
Self-Diagnostics	Complete function check, red LED and LCD error indication (display mode)
Display	Configurable colour LCD with CO <sub>2</sub> (ppm), Temperature (°C) and Humidity (% RH)
Maintenance	Maintenance-free when using Senseair ABC algorithm (Automatic Baseline Correction). <sup>1</sup>

### CO<sub>2</sub> measurement

Operating principle	Non-dispersive infrared (NDIR)
Sampling method	Diffusion
Response time (T <sub>1/ε</sub> )	<3 min diffusion time
Measurement period	15 s
Measurement range	0 – 2000 ppm <sub>vol</sub>
Accuracy	±50 ppm @ (1000 ppm <sub>vol</sub> , 17 – 28 °C and 30 – 60% RH) Typical full range: ±30 ppm ±3% of measured <sup>2, 3</sup>

<sup>1</sup> ABC is enabled in default configuration

<sup>2</sup> Accuracy is specified over operating temperature range 0 – 50 °C and relative humidity 0 – 95% RH non-condensing at normal pressure 101.3 kPa. Specification is referenced to certified calibration mixtures. Uncertainty of calibration gas mixtures (±1% currently) is to be added to the specified accuracy for absolute measurements.

<sup>3</sup> Accuracy is defined after minimum three weeks of continuous operation with ABC enabled (default configuration)



## Key technical specification

Item	tSENSE (Disp)
Pressure dependence	+1.58% reading per kPa deviation from normal pressure 101.3 kPa

### Temperature measurement

Operating principle	Bandgap temperature sensor
Temperature measurement range	0 – 50 °C
Temperature measurement accuracy	±0.5 °C (@ 17 – 28 °C), ±1.0°C (@ 0 – 50 °C)
Repeatability	±0.25 °C (@ 17 – 28 °C)
Response time	<6 min (Air velocity of 0.15 m/s)
Measurement period	15 s

### Relative humidity measurement

Operating principle	Capacitive humidity sensor
Relative humidity measurement range	0 – 100% RH
Relative humidity measurement accuracy	±5% RH (@ 20 – 80% RH)
Hysteresis	±1% RH (@ 20 – 80% RH)
Annual drift	<±0.5% RH
Repeatability	±0.25 °C (@ 17 – 28 °C)
Response time	<6 min (Air velocity of 0.15 m/s)
Measurement period	15 s

### Electrical / Mechanical

Power supply	12 V DC, 24 V DC, or 24 V AC ±20%, 50/60 Hz
Power consumption	<0.6 W
Peak power consumption	<2 W
Wiring connections	Screw terminal, max 1.5 mm <sup>2</sup> Containing: Power, GND, Out1, Out2, Out3, RS485, and passive temperature or relay (just one of them can be available).
Dimensions [mm]	125 x 85 x 22 (Length x Width x Height)

## Key technical specification

Item	tSENSE (Disp)
Dimensions display [mm]	49 x 37 (Length x Width)
Linear analogue outputs protection	PTC-fuses (auto reset), short-circuit safe
Linear analogue outputs conversion accuracy	±2% of reading ±2 0mV
Linear analogue outputs signal	Voltage output 0–10 V, $R_{out} < 100 \Omega$ , Load: $> 5 k\Omega$
Linear analogue outputs resolution	10-bits, 10 mV steps, 0.1% steps of full ppm / °C / % RH range

Table 1: Key technical specification for tSENSE (Disp)

## Terminal descriptions

The table below specifies terminals and I/O options available on the tSENSE (Disp)

Functional group	Descriptions and ratings
G+:	Power supply voltage may be AC or DC. Positive pole of DC power supply shall be connected to G+. Sensor performs half wave rectification of supplied AC voltage. Power supply lines are protected by a varistor and fuse from voltage spikes and over voltage. Nominal specification: 12 V DC, 24 V DC, or 24 V AC ±20%, 50/60 Hz Power consumption: $< 0.6 W$
G0:	Connected to sensor's ground. Negative pole connection for DC power supply

**Outputs** The outputs can be configured with PC software UIP (version 5 or higher). See information at <https://senseair.com/download>

### Linear analogue outputs:

Out1: CO <sub>2</sub>	Buffered linear output 0 – 10 V, corresponds to 0 – 2000 ppm <sub>vol</sub> . Resolution: 10-bits, 10mV steps.
Out2: Temperature (T)	Buffered linear output 0 – 10 V, corresponds to 0 – 50 °C. Resolution: 10-bits, 10mV steps.
Out3: Relative humidity (RH)	Buffered linear output 0 – 10 V, corresponds to 0 – 100% RH. Resolution: 10-bits, 10 mV steps.
CO <sub>2</sub> /T /RH	Configurable via touch display.

### Digital output:

Relay (RL)	On $\geq 1000 \text{ ppm}_{vol} \text{ CO}_2$ , Off $\leq 900 \text{ ppm}_{vol} \text{ CO}_2$ . Form C / DPDT, $I_{max}$ : 1 A/50 V AC/24 V DC
Input Source CO <sub>2</sub> / T/ RH	Configurable via touch display.

## Serial Communication

RS485	Modbus (MB) or BACnet (BAC) protocol
-------	--------------------------------------

Table 2: I/O notations for tSENSE (Disp)



## Maintenance

The tSENSE (Disp) is basically maintenance free. An internal self -adjusting calibration function takes care of normal long-term drift associated to the CO<sub>2</sub> sensor. To secure the highest accuracy, a time interval of five years is recommended between CO<sub>2</sub> calibrations, unless some special situations have occurred.

Calibration option	CO <sub>2</sub> concentration level
Background calibration	Assuming 400 ppm CO <sub>2</sub> sensor exposure
Zero Calibration	Assuming 0 ppm CO <sub>2</sub> sensor exposure

Table 3: Calibration options for the tSENSE (Disp)

The calibration options can be achieved by Senseair software (UIP5) which can be free downloaded at <https://senseair.com/download>, or by Modbus communication (more information in document TDE0103 which is available at Senseair website), or using calibration option on tSENSE display (more information in document UMA0176 which is available at Senseair website).

tSENSE (Disp) has a manual option to achieve the background calibration by pushing the blue button which you can find in the bottom side of the housing for 15 seconds in fresh air (400 ppm CO<sub>2</sub>) more information available in document UMA0176.

## Self-diagnostics

The system contains complete self-diagnostic procedures. A full system test is executed automatically every time the power is turned on. In addition, constantly during operation, the sensor probes are checked against failure by checking the valid dynamic measurement ranges. All EEPROM updates, initiated by the sensor itself, as well as by external connections, are checked by subsequent memory read back and data comparisons. These different system checks return error bytes to the system RAM. The error codes are available by Modbus / BACnet protocols on RS485. Out of Range is the only bit that is resets automatically after return to normal state. All other error bits should be reset manually after return to normal by power off/on.


## Sensor error codes and action plan

Bit #	Error code	Error description	Suggested action
0	CO <sub>2</sub> sensor: com error	Not able to communicate with CO <sub>2</sub> sensor module.	Restart the sensor by power OFF – power ON. Contact local distributor.
1	CO <sub>2</sub> sensor: CO <sub>2</sub> measure error	CO <sub>2</sub> measurement error.	Background calibration (for more details please read page 15 in UMA176 document which you can find at Senseair website). Contact local distributor. See note 1!
2	CO <sub>2</sub> sensor: temperature measure error	Temperature measurement error.	Restart the sensor by power OFF – power ON.  Contact local distributor
3	RH/T sensor: com error	Not able to communicate with RH/T sensor module	
4	RH/T sensor: RH measure error	Relative humidity measurement error	
5	RH/T sensor: T measure error	Temperature measurement error, sensor will use CO <sub>2</sub> sensor temperature if RH/T temperature is unavailable, S_Temp will be set to NTC_Temp	Contact local distributor
6			
7			
8	Output configuration error	Error in output configuration, output is still updated.	Check connection and loads of outputs. Check detailed settings and configuration with UIP software ver.5 or higher.  Contact local distributor.
9	Memory error	One or several bytes of sensors parameters memory (settings) are corrupt	Restart the sensor by power OFF – power ON. Contact local distributor.

Table 4: Sensor error codes and action plan

**Note 1.** Any probe is out of range. It occurs, for instance, during over-exposure of CO<sub>2</sub> sensor, in which case the error code will automatically reset when the measurement values return to normal. It can also indicate the need of zero calibration. If the CO<sub>2</sub> readings are normal, and still the error code remains, any other sensor probe mounted (if any) can be defect, or the connection to this probe is broken.

If several errors are detected at the same time the different error code numbers will be added together into one single error code!

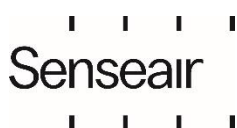

## IMPORTANT NOTICE

1. Senseair reserves the right to make changes to the information contained in this document without notice. When you consider any use or application of Senseair product stipulated in this document ("Product"), please make inquiries the sales office of Senseair or authorised distributors as to current status of the Products.
2. All information included in this document are provided only to illustrate the operation and application examples of Senseair Products. Senseair neither makes warranties or representations with respect to the accuracy or completeness of the information contained in this document nor grants any license to any intellectual property rights or any other rights of Senseair or any third party with respect to the information in this document. You are fully responsible for use of such information contained in this document in your product design or applications. **Senseair ASSUMES NO LIABILITY FOR ANY LOSSES INCURRED BY YOU OR THIRD PARTIES ARISING FROM THE USE OF SUCH INFORMATION IN YOUR PRODUCT DESIGN OR APPLICATIONS.**
3. The Product is neither intended nor warranted for use in equipment or systems that require extraordinarily high levels of quality and/or reliability and/or a malfunction or failure of which may cause loss of human life, bodily injury, serious property damage or serious public impact, including but not limited to, equipment used in nuclear facilities, equipment used in the aerospace industry, medical equipment, equipment used for automobiles, trains, ships and other transportation, traffic signaling equipment, equipment used to control combustions or explosions, safety devices, elevators and escalators, devices related to electric power, and equipment used in finance-related fields. Do not use Product for the above use unless specifically agreed by Senseair in writing.
4. Though Senseair works continually to improve the Product's quality and reliability, you are responsible for complying with safety standards and for providing adequate designs and safeguards for your hardware, software and systems which minimise risk and avoid situations in which a malfunction or failure of the Product could cause loss of human life, bodily injury or damage to property, including data loss or corruption.
5. Do not use or otherwise make available the Product or related technology or any information contained in this document for any military purposes, including without limitation, for the design, development, use, stockpiling or manufacturing of nuclear, chemical, or biological weapons or missile technology products (mass destruction weapons). When exporting the Products or related technology or any information contained in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. The Products and related technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Please contact Senseair sales representative for details as to environmental matters such as the RoHS compatibility of the Product. Please use the Product in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Senseair assumes no liability for damages or losses occurring as a result of noncompliance with applicable laws and regulations.
7. Resale of the Product with provisions different from the statement and/or technical features set forth in this document shall immediately void any warranty granted by Senseair for the Product and shall not create or extend in any manner whatsoever, any liability of Senseair.
8. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Senseair.

[www.senseair.com](http://www.senseair.com)

