

# Installation Manual

## eSENSE Duct (Disp)

CO<sub>2</sub> / temperature sensor in a housing  
for mounting in ventilation ducts




Figure 1 The eSENSE Duct with and without display

### General

The IAQ-sensor product eSENSE Duct (for mounting in ventilation ducts) is designed to measure carbon dioxide (CO<sub>2</sub>). Option - TR is prepared for temperature measurements by the resistive temperature probe mounted by the user. Option Disp displays the measured CO<sub>2</sub> value in ppm (parts-per-million) on the LCD.

The units are designed for connecting to Direct Digital Control (DDC) with 0-10V or 2-10V signal inputs. The two parallel signal outputs Out(1) (0-10V) and Out(2) (2-10V or 4-20 mA) give linear signal voltages or currents corresponding to the measuring range.


The output Out(2) also indicates the status by setting the output voltage to 1V or the output current to 2 mA when the sensor self-diagnostics detects any error.

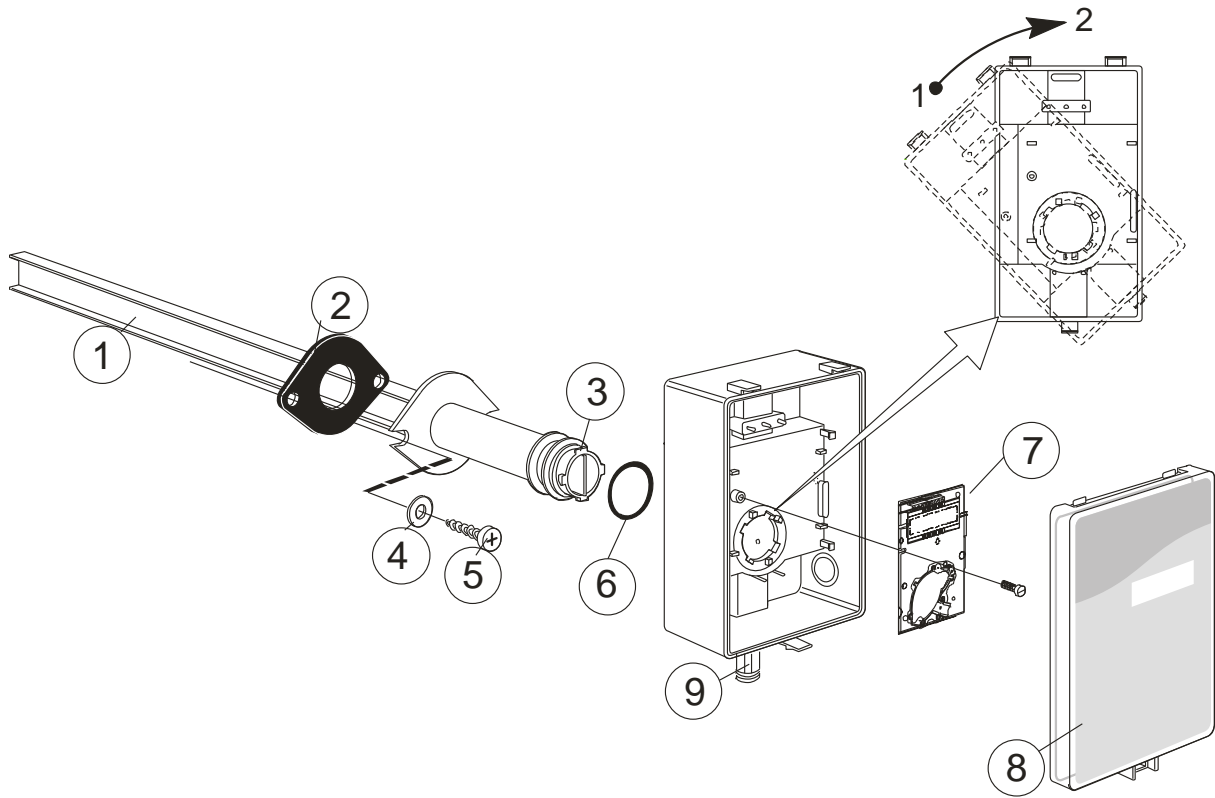

- |                            |  |
|----------------------------|--|
| 1 Sampling probe           | 6 O-ring 29,2x3,53                         |
| 2 Sealing gasket           | 7 PCB<br>(Factory supplied mounted in box) |
| 3 Largest locking knob     | 8 Snap-in lid                              |
| 4 2 washers (Not included) | 9 Cable entry bushing                      |
| 5 2 screws (Not included)  |  |

Figure 2 Parts of the eSENSE for duct mounting

Mounting of eSENSE on to the duct.

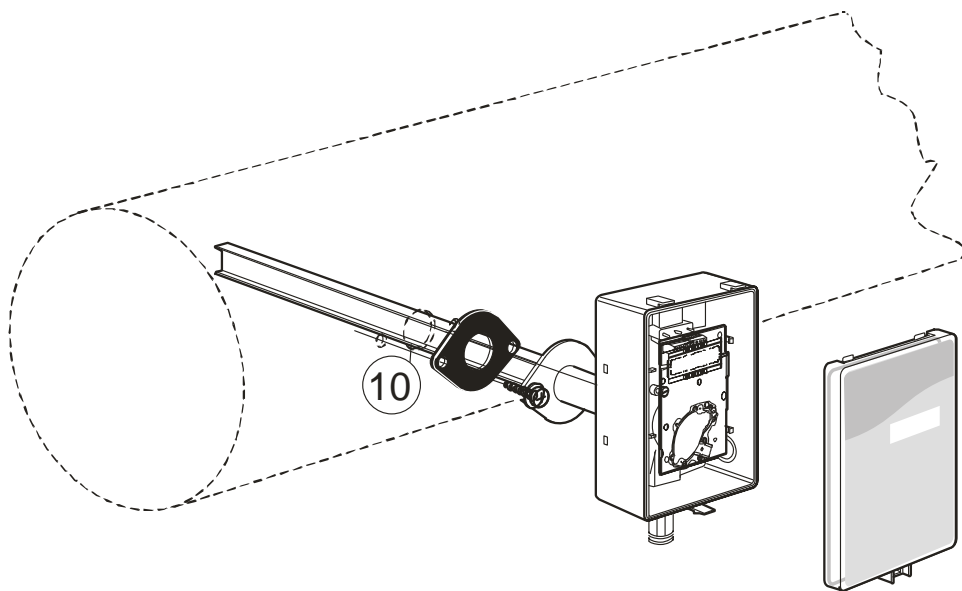

- 10 Hole with 25 mm diameter

Figure 3 Mounting of the sensor to the ventilation duct

## Mounting Instruction

Since there might be a substantial pressure difference in duct mounting applications, it is essential to avoid ambient air from suction into the duct mounting box. For correct function it is indispensable that the sealing of the box cover, the cable entry bushings, the cable feed through and the duct entrance are absolutely tight. The duct entrance may need extra sealing paste in order to prevent leakage. The PCB must be handled carefully and protected from electrostatic discharge.

- 1) **Place the O-ring** around the hole at the back of the box. See figure 2.
- 2) **Electrical cable entry:** The box has a factory mounted cable entry bushing. Never feed more than one cable through each cable entry bushing, or else gas might leak through!
- 3) **Mounting the tube:** Drill a hole (10) with 25 mm diameter (or 1 inch) for the sampling probe and two holes with 4 mm diameter for the screws (5) into the air duct and mount the tube (1) with the gasket (2). The sampling probe should be mounted with the largest locking knob on top. The unit can be mounted with the air coming from the left or right.
- 4) **Attaching the sensor box** is made to the sampling probe by a snap-in bayonet fitting. Orient the box onto the sampling probe so that the box upside is on the same side as the largest locking knob (3). When the probe is fitted into the notches of the box, then turn the box clockwise until stop (see Figure 2). Position 1 indicates *open* where the box can be removed from the sampling probe. In position 2 the box is locked to the probe.

## Electrical connections

The power supply has to be connected to  $\overset{\sim}{+}$  and  $\perp$ .  $\perp$  is considered as system ground. The same ground reference has to be used for the eSENSE unit and for the DDC/signal receiver.

### NOTE!

The same ground reference has to be used for the eSENSE unit and for the control system!

### NOTE!

An external fuse shall be used with this sensor. A separate fuse must be used for each sensor.

Terminal	Function	Electrical data	Remarks Standard settings	Remarks Settings of this sensor
$\overset{\sim}{+}$	Power (+)	24 VAC/DC+ (+-20%), 2W		
$\perp$	Power ground (-)	24 VAC/DC-	System voltage reference	
Out(1)	Analogue output 1 (+)	0-10 VDC or According to label	0-2000 ppm CO <sub>2</sub>	
Out(2)	Analogue output 2 (+)	2.0...10.0 VDC or 4.0 ... 20.0 mA or According to label	0-2000 ppm CO <sub>2</sub>	
		0.9...1.6 VDC or 1.5 to 2.5 mA	Status = ERROR	
		0VDC or 0mA	Status = NOT READY	

Table I. Connections of the main terminal of eSENSE

### Important

1. All low voltage connections to this device must be 24 V AC/DC Class 2 (or equivalent to your local regulations).
2. All wiring must comply with applicable local codes, ordinances and regulations.

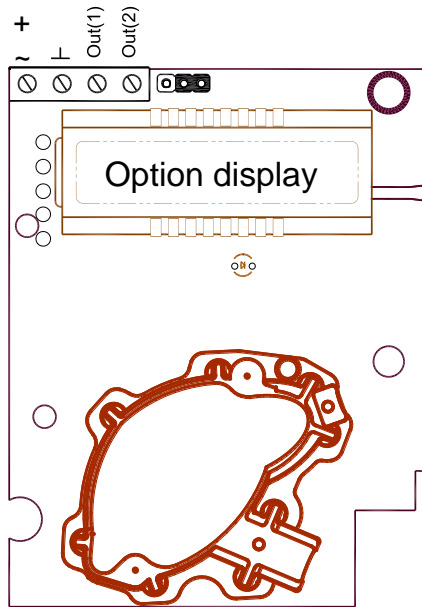


Figure 5 PCB with jumper to configure OUT2 for current output 4-20mA or voltage output 2-10VDC

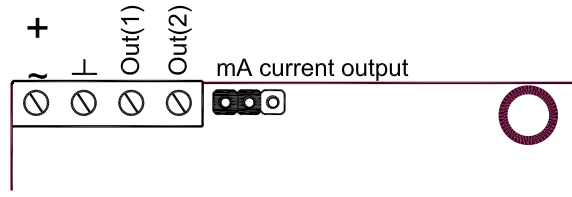


Figure 4 Enlarged picture of the PCB with the jumper set to current output (left position)

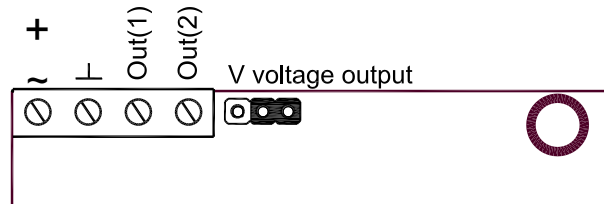


Figure 6 Enlarged picture of the PCB with the jumper set to voltage output (right position)

## Self-diagnostics

The system contains a complete self-diagnostic procedure that is executed automatically when the sensor is in operation. Sensors with display show a *wrench* if an error is found. The wrench is shown during the first seconds after power up and if the measuring range is exceeded. The output Out(2) indicates the same information by setting the output voltage to 1V or 2 mA.

## Maintenance

The eSENSE is basically maintenance-free in normal environments thanks to the built-in self-correcting algorithm. Discuss your application with Senseair in order to get advice for a proper calibration strategy.

The sensor accuracy is defined at continuous operation (at least periods after installation)

Electronic products should be disposed of via a suitable recycling centre.

# Dimensions

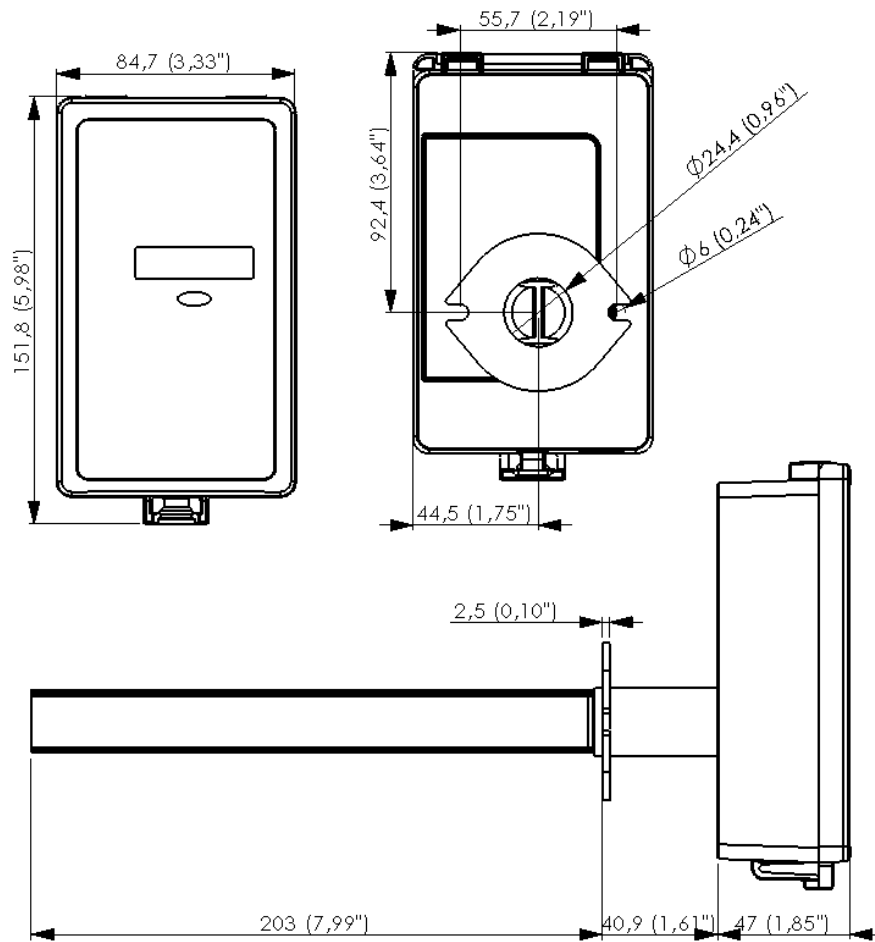


Figure 7 The dimensions of the sensor in mm and (inches)



Senseair® AB  
Stationsgatan 12  
Box 96  
824 08 Delsbo  
SWEDEN

Phone: +46-(0)653 - 71 77 70  
E-mail: [info@senseair.com](mailto:info@senseair.com)  
Web site: [www.senseair.com](http://www.senseair.com)