

Installation Manual

eSENSE II (Disp)

CO₂ sensor in a housing



General

The IAQ-sensor product eSENSE II (sensor for wall mounting) is designed to measure carbon dioxide (CO₂) in rooms. Option - Disp displays the measured CO₂ value in ppm (parts-per-million) on the LCD.

The units are designed for connecting to Direct Digital Control (DDC). The two parallel signal outputs OUT1 (0-10 V) and OUT2 (2-10 V or 4-20 mA) give linear signals corresponding to the measuring range.

The OUT2 output also indicates the *status* by setting the output voltage to 1 V or current to 2 mA when the sensor self-diagnostics detects any error.

To open the wall mounted housing

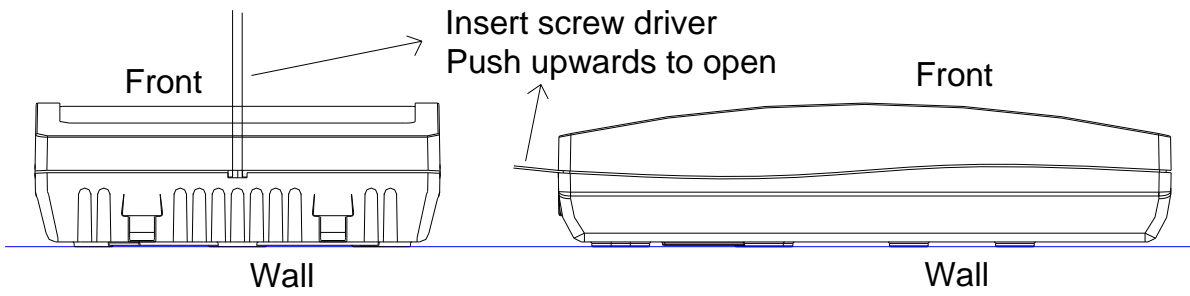


Figure 1. Closed housing seen from the top and the side. The housing is opened by inserting a screwdriver and pushing to the front side of the housing. The locking hooks will then be released.



Figure 2. Closed housing seen from the side. The housing is opened by inserting a screwdriver and pushing left (to the front side). The locking hooks will then be released.

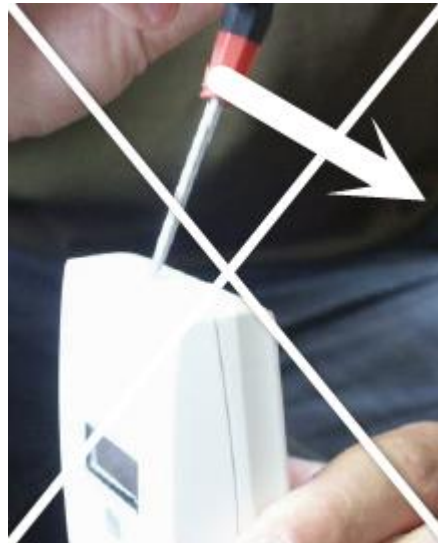


Figure 3. Closed housing seen from the side. Never push to the right. The locking hooks may break and the housing is damaged

Dimensions

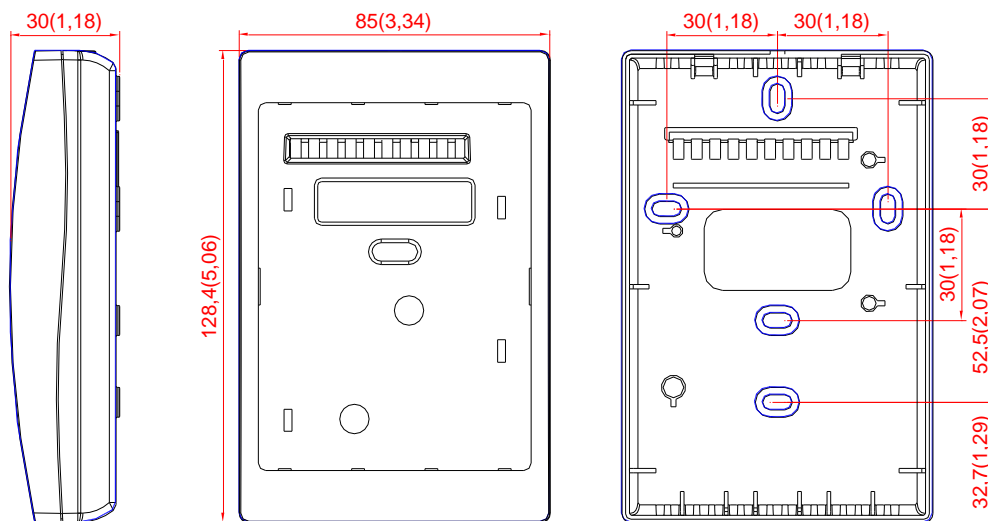


Figure 3. The dimensions of the sensor in mm and (inches)

Electrical connections

The power supply has to be connected to \sim \oplus and \ominus . \ominus is considered as system ground. The same ground reference has to be used for the eSENSE unit and for the DDC/signal receiver.

The same ground reference has to be used for the eSENSE unit and for the control system!

NOTE!

An external fuse shall be used with this sensor. A separate fuse must be used for each sensor

Terminal	Function	Electrical data	Standard settings	Settings of this sensor
\sim \oplus	Power (+)	24 VAC/DC+ (+20%), 2W		
\ominus	Power ground (-)	24 VAC/DC-	System voltage reference	
OUT(1)	Analogue output 1 (+)	0-10 VDC	0-2000 ppm CO ₂	
OUT(2)	Analogue output 2 (+)	2,0...10,0 VDC or 4,0 ... 20,0 mA 0,9...1,6 VDC or 1.5 to 2,5 mA 0 VDC or 0mA	0-2000 ppm CO ₂ Status = ERROR Status = NOT READY	

Table I. Connections of the main terminal of eSENSE

Important

1. All low voltage connections to this device must be 24 V AC/DC Class 2 (or equivalent to your local regulations).
2. All wiring must comply with applicable local codes, ordinances and regulations

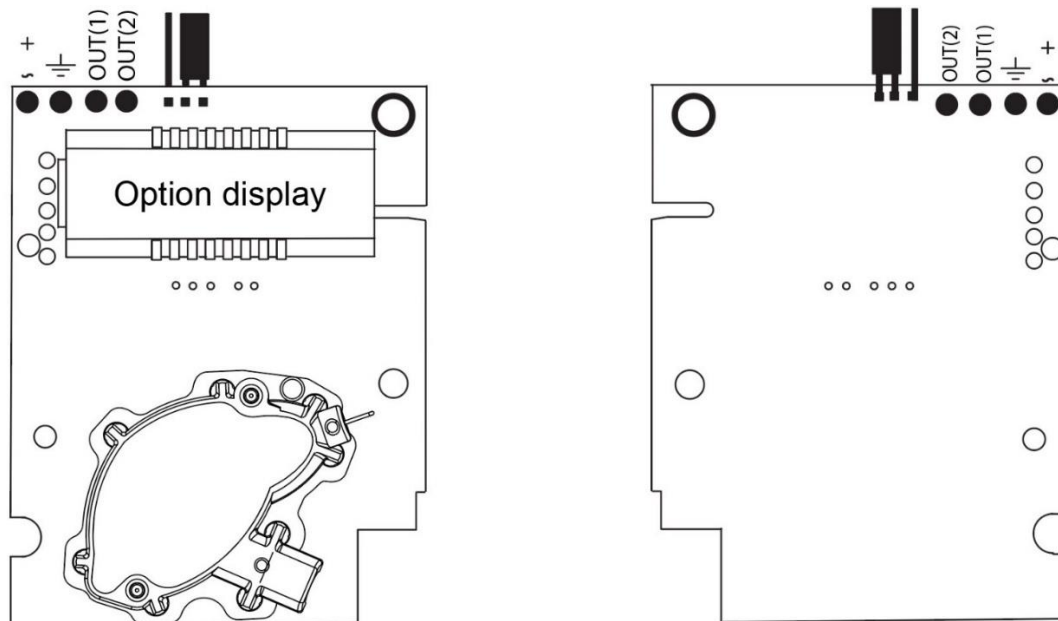


Figure 4. The eSENSE II PCB seen from the front and the back. The OUT2 jumper is in the default position (voltage)

Configuration jumper for OUT2 output

The output OUT2 can be used as a voltage or current output. The output is configured by the jumper on top of the PCB. The configuration of the output can be changed by moving the jumper to the desired position. The output has to be reconfigured before the unit is powered up.

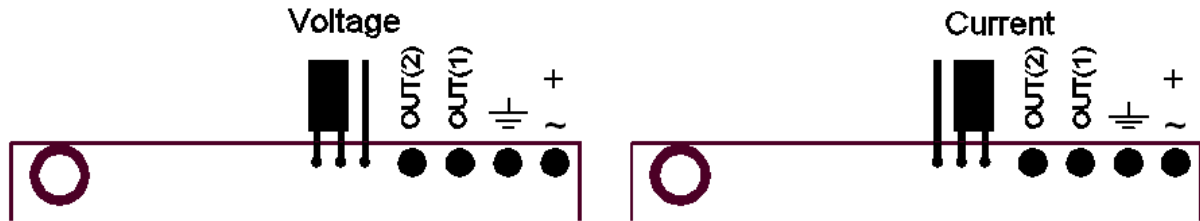


Figure 5. The upper part of the eSENSE II PCB seen from the back with the jumper in voltage (default) and current position

Self-diagnostics

The system contains complete self-diagnostic procedures that are executed automatically when the sensor is in operation. Sensors with display show a *wrench* if an error is found. The wrench is shown during the first seconds after power up and if the measuring range 2000 ppm is exceeded. The output OUT2 indicates the same information by setting the output to 1 V or 2 mA.

NOTE: The sensor accuracy is defined at continuous operation (at least 3 ABC periods after installation)



Senseair® AB (headquarter)

Stationsgatan 12

Box 96

824 08 Delsbo

SWEDEN

Phone: +46-(0)653 - 71 77 70

E-mail: info@senseair.com

Web site: www.senseair.com